


# IMPORTANT FACEPLATE ASSEMBLY INSTRUCTIONS

Mount the faceplate washers with the burr side facing the bolt head and the smooth side facing the faceplate. The sharp edges of the burr could damage the aluminum faceplate. Max torque for all Firefly stem bolts is 5Nm but always refer to handlebar and steerer torque specs and torque bolts to the lowest Nm.

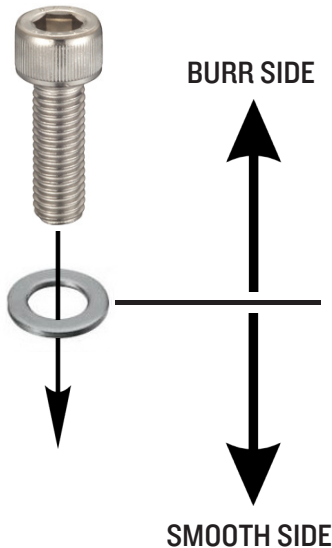

The Firefly stem is designed for the upper 2 bolts to tighten the faceplate flush to the backplate. First tighten the top bolts to until the plate is flush to the stem (no gap) and torque to 5Nm. Then tighten the 2 bottom bolts to the proper torque (there will be a gap). Max torque for all Firefly stem bolts is 5Nm but always refer to handlebar and steerer torque specs and torque bolts to the lowest Nm.

1st: tighten top bolts flush to 5Nm

2nd: tighten bottom bolts to proper torque

