

ALL-ROAD FIT FORM



KEVIN WOLFSON
LEAD FRAME DESIGNER

617.825.3473
KEVIN@FIREFLYBICYCLES.COM

FIREFLY BICYCLES
117 BOSTON ST
DORCHESTER, MA
02125

FIREFLYBICYCLES.COM

CONTACT INFORMATION AND FRAME SPECIFICATIONS

Name

Shipping Address

Primary Phone Number

Email

MATERIAL

- Titanium // \$4650 Ti-Carbon // \$6500

FORK CHOICE

- Enve Disc Cross
- Parlee Disc Cross with integrated fender mounts // \$100
- Enve GRD // \$200
- Other

WHEEL INFO

Max tire size for new bike

SHIFTING

- Single Speed Geared Both

BRAKES

- Disc Cantilever Linear Pull

BOTTLE CAGES

- 0 1 2 3

EXTRA FRAME OPTIONS

- Internal Di2 routing // \$200 Internal brake routing (*only available in Ti*) // \$350
- Pressfit30 BB (included in ti-carbon) // \$75
- 1 1/8" head tube
- Tapered head tube // \$100
- Rack mounts Fender mounts
- Pump peg Quick release disc dropouts
- Ti S&S couplers // \$1000
- Integrated seatpost // \$800

FINISH OPTIONS

- Brushed Bead-blasted Custom

LOGOS

- Decals Brushed/blasted // \$100 Anodized // \$200

Contact us for more details about finish options.

PARTS KIT

We offer a full range of parts kits and components to complete your dream bike.
Email kevin@fireflybicycles.com for more details.

CURRENT BIKE INFO

Please take all measurements in cm

MAKE

MODEL

YEAR

THE FOUR KEY CONTACT POINTS

A: SADDLE HEIGHT

Measure from the center of the bottom bracket to the top-center of the saddle.

B: SADDLE SETBACK

This is best measured with a plumb bob (any long string with a weight on it will do).

Place the string on the tip of the saddle and drop the weight below the bottom bracket.

After it steadies, measure horizontally from the string to the center of the bottom bracket.

C: REACH

Measure from the tip of the saddle to the top-center of the bars.

D: HANDLEBAR DROP

Measure vertically from the top of the saddle to the ground.

Then measure vertically from the top-center of the bars to the ground.


Subtract the second measurement from the first.

OTHER BIKE SPECS

Horizontal TT length

Stem length and angle

Headset Spacers (in mm)

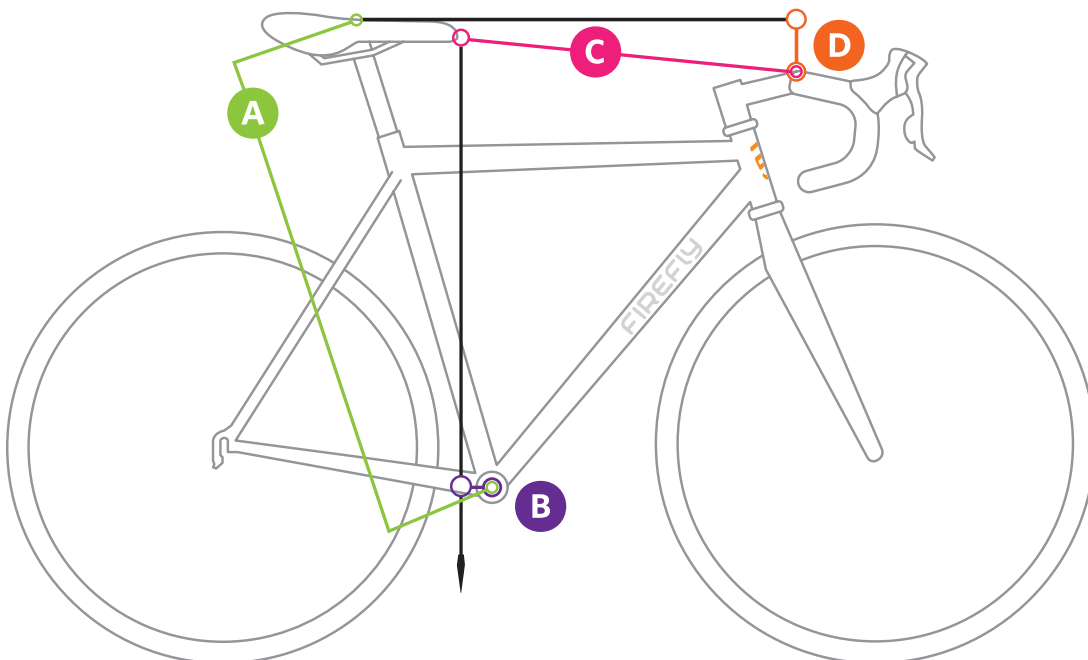

BODY INFO

Please take all measurements in cm

WEIGHT

AGE

A: HEIGHT

B: TOTAL BODY LENGTH

Your sternal notch is the notch at the base of your neck. Stand up straight with your feet at shoulder width. Measure from your sternal notch to the floor.

C: INSEAM

Still standing with your feet shoulder width apart, hold a book between your legs and parallel to the ground. Pull the spine of the book up into your perineum with the pressure of a saddle. Measure from book's spine to the ground.

Check this measurement a couple of extra times, it is the most difficult to take accurately.

D: ARM LENGTH

Your acromion process is the outermost bone in your shoulder. Hold onto a pen and hold your arm as straight as possible at a 45° angle. Measure from the acromion process to the pen.

E: SHOULDER WIDTH

Measure from one acromion process to the other.

