



CONTACT INFORMATION & FRAME SPECIFICATIONS

Name
 Shipping Address
 Primary Phone Number
 Email

MATERIAL

Titanium // \$5600 Ti-Carbon // \$6900

FORK CHOICE

ENVE AR Disc Whiskey No. 9 Rd+ *(select for bikes with shorter top tubes, 55cm and below)*
 Firefly All Road // \$1600 Other

WHEEL INFO

650b 700c Both (all disc bikes fit both) Max tire size for new bike

SHIFTING

Mechanical 2x Mechanical 1x Wireless Internal Di2 // \$200

BRAKES

Disc (standard) Cantilever Linear pull

BOTTLE CAGES

0 1 2 3

EXTRA FRAME OPTIONS *Contact us or visit our [Technology page](#) for more details about our frame options*

T47 threaded BB <i>(included with Ti-Carbon)</i> // \$75	Internal brake routing // \$350
Pressfit30 BB <i>(included with Ti-Carbon)</i> // \$75	Fender mounts
Tapered head tube for integrated headset // \$100	3D printed chainstay yoke for max tire clearance and shortest possible chainstay length // \$200
Rack mounts	Bosch Performance pedal assist motor mount // \$800
Pump peg	<i>Complete builds starting at \$9200</i>
Ti travel couplers // \$1300	<i>(only available on full ti frames sold within the US)</i>
Proprietary tapered carbon integrated seatpost // \$800	
Custom frame bag mounts // \$100	

FINISH OPTIONS

Bead-Blasted Brushed // \$300 Custom

LOGOS

Decals Brushed/Blasted Anodized // \$200

Contact us or visit our [Finish Options page](#) for more details about finish options.

PARTS KIT

We offer a full range of parts kits and components to complete your dream bike.
 Email kevin@fireflybicycles.com for more details.



CURRENT BIKE INFO

MAKE

MODEL

YEAR

THE FOUR KEY CONTACT POINTS

Please take all measurements in cm

A. SADDLE HEIGHT

Measure from the center of the bottom bracket to the top-center of the saddle.

B. SADDLE SETBACK

This is best measured with a plumb bob (any long string with a weight on it will do). Place the string on the tip of the saddle and drop the weight below the bottom bracket. After it steadies, measure horizontally from the string to the center of the bottom bracket.

C. REACH

Measure from the tip of the saddle to the top-center of the bars.

D. HANDLEBAR DROP

Measure vertically from the top of the saddle to the ground.
Then measure vertically from the top-center of the bars to the ground.
Subtract the second measurement from the first.


OTHER BIKE SPECS

Horizontal TT Length

Stem Length & Angle

Headset Spacers (*in mm*)

Saddle Choice

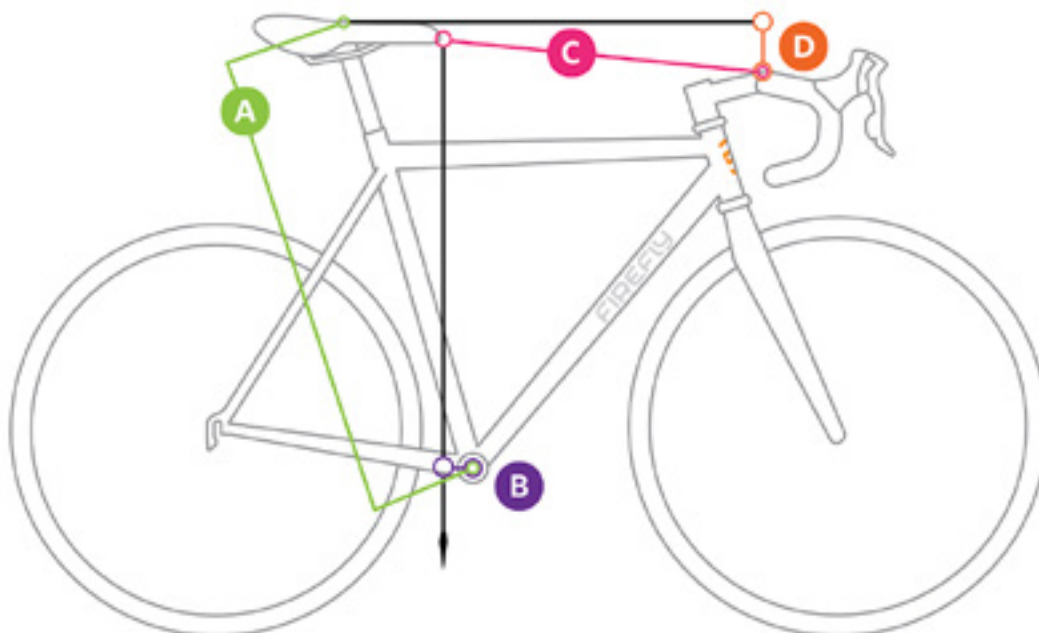



BODY INFO

WEIGHT

AGE

Please take all measurements in cm

A. HEIGHT

B. TOTAL BODY LENGTH

Your sternal notch is the notch at the base of your neck. Stand up straight with your feet at shoulder width. Measure from your sternal notch to the floor.

C. INSEAM

Still standing with your feet shoulder width apart, hold a book between your legs and parallel to the ground. Pull the spine of the book up into your perineum with the pressure of a saddle. Measure from book's spine to the ground. Check this measurement a couple of extra times, it is the most difficult to take accurately.

D. ARM LENGTH

Your acromion process is the outermost bone in your shoulder. Hold onto a pen and hold your arm as straight as possible at a 45° angle. Measure from the acromion process to the pen.

E. SHOULDER WIDTH

Measure from one acromion process to the other.

